

Download 1994 Ford Explorer Spindle And Shaft Assembly

Download SPINDLE & SHAFT ASSEMBLY Removal 1. Raise and support vehicle. Remove wheel assembly. Remove caliper from rotor. Remove locking hub. See AUTOMATIC LOCKING HUBS or MANUAL LOCKING HUBS under REMOVAL & INSTALLATION. Ford Explorer SPINDLE AND SHAFT ASSEMBLY REMOVAL These manuals are in PDF format and loaded onto a Quality CD. Download Removal 1. Raise and support vehicle. Remove wheel assembly. Remove caliper from rotor. Remove locking hub. 2. Remove wheel bearings, lock nuts, hub and rotor. Fig. 9: Exploded View Of Spindle & Components Courtesy of FORD MOTOR CO. STEERING KNUCKLE Removal 1. Remove the spindle and steering shaft assembly.